

 
Warranty

IF WITHIN ONE YEAR FROM THE DATE OF PURCHASE, THIS PRODUCT FAILS DUE TO A DEFECT IN MATERIAL OF WORKMANSHIP, HIS WILL REPAIR OR REPLACE THE PRODUCT, OR SUPPLY NECESSARY COMPONENTS FREE OF CHARGE.

This Warranty Excludes:

- Damage caused by accident, abuse, mishandling, or transport;
- Units subjected to unauthorized repair;
- Damage exceeding the cost of the product;
- Deterioration of the delivered product resulting from abnormal storage and/or safeguarding conditions on the client's premises;
- Failure to provide the dated proof of purchase.

☉ Packing List

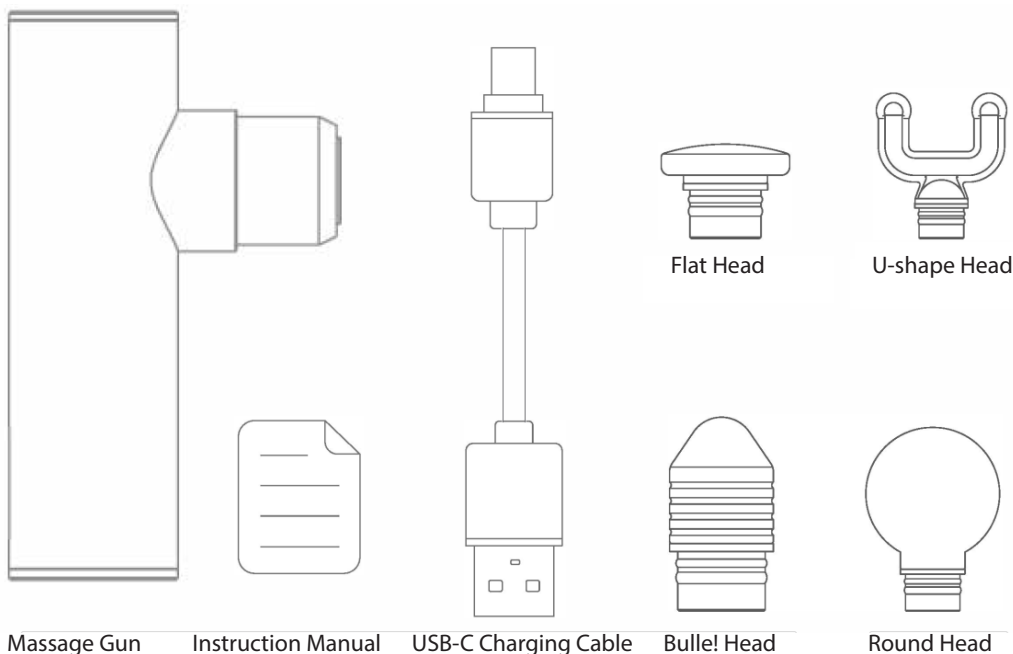

chiroform[®]

Your strong back partner....

Chiroform Ltd • Mariendalsvej 22
8800 Viborg • Denmark
Tel:+45 86613611
chiroform@chiroform.dk
www.chiroform.com

Mini Cooper Pro MassageGUN

Manual

DK Mini Cooper Pro MassageGUN
EN Cooper Vibration Massage Device

chiroform[®]

Din rygstærke partner ...

DK

☉ Specifikationer

Produkt navn: Mini Copper Pro MassageGUN
Produkt model: Cooper
Nominel effekt: 16W
Spidseffekt: 60W
Nominel spænding: 8V
Mærkestrøm: 2A
Nominel frekvens: 50/60Hz
Udgangsspænding: 5V
Udgangsstrøm: 2A
Produkt vægt: 390g
Max hastighed: 3200r/min
Batteri kapacitet: 2000mAh
Produkt størrelse: 75x38x130mm
(Eksklusiv massagehoveder)
Strømforsyning: genopladeligt lithium batteri.

Massagehoved
Udskiftelig

Håndtag

☉ Massagehoved



Rundt Hoved

Velegnet til helkropsmassage samt håndflader og fodsåler



 
Flad Hoved

Velegnet til massage af hele kroppen



Spids Hoved


Velegnet til dybdeliggende væv til meridianer og led.

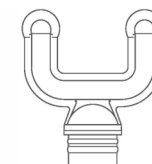

U-formet Hoved

Velegnet til nakke, skulder, rygsøjle og sener

 ⊙ Sådan udskiftes massagehovedet

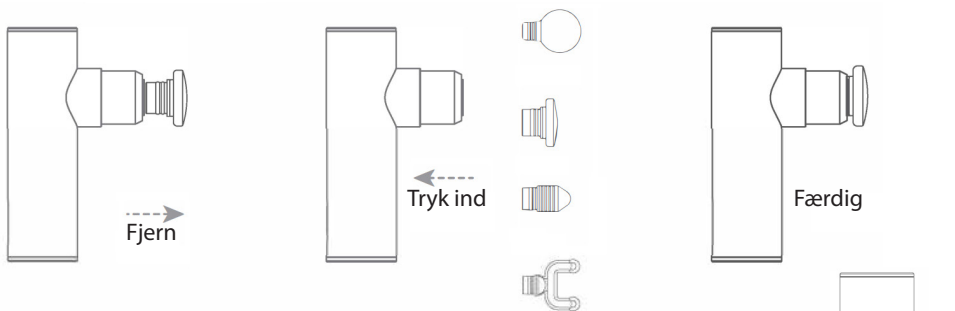

Tænd / Sluk

- For at tænde skal du holde tænd/sluk knappen inde i 3 sekunder
- For at slukke skal du holde tænd/sluk knappen inde i 3 sekunder

Justering af hastighed

Starter automatisk på niveau 1

- Hver gang du trykker på tænd/sluk-knappen går du et niveau op.
- Efter niveau 3 går den ned på niveau 1 igen ved næste tryk.

OBS:

Enheden er udstyret med en arbejdstimer på 10 minutter for at undgå skader på muskler og fascia ved overdrevet brug.

⊙ Indikator og signallampe


- Hastighedsindikatoren viser vibrationshastigheden.
- Enheden vil som standard være sat til Niveau 1, når den tændes.
- Hastigheden ændres ved hvert tryk.

3 hastighedsniveauer

Niveau 1	Niveau 2	Niveau 3
1800r/min	2600r/min	3200r/min

⊙ Opladning

 - Enheden skal være fuld opladet inden brug første gang.
- Det røde lys vil lyse mens enheden oplader og det hvide lys er tændt, når enheden er fuld opladet.
- Det tager ca. 3 timer for at opnå fuld opladning og den har en batteritid på ca 8 timer ved brug på niveau 3.
- Når batteriet er under 10%, vil det røde lys begynde at blinke og det anbefales at enheden bliver ladet op igen.

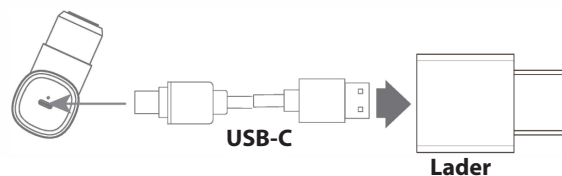

OBS: Opladeren skal være 5V/2A.

- For en sikkerhedsskyld må enheden ikke anvendes under opladning.
- For lang levetid anbefales det at oplade enheden så snart den røde lampe begynder at lyse.



Contraindication

PLEASE DO NOT USE THE DEVICE WITHOUT FIRST OBTAINING APPROVAL FROM YOUR DOCTOR IF ANY OF THE FOLLOWING APPLY

Pregnancy, diabetes with complications such as neuropathy or retinal damage, wear of pace-makers, recent surgery, epilepsy or migraines. herniated disks. spondylolisthesis. spondylolysis, or spondylosis, recent joint replacements or IUD's, metal pins or plates or any concerns about your physical health. Frail individuals and children should be accompanied by an adult when using any vibration device. These contra indications do not mean that you are not able to use a vibration or exercise device but we advise you to consult a doctor first! Ongoing research is being done to the effects of vibration exercise for specific medical disorders. This will likely result in the shortening of the list of contra indications as shown above.

Practical experience has shown that integration of vibration exercise into a treatment plan is advisory in a number of cases. This must be done on the advice of and in accompaniment with a doctor, specialist or physiotherapist.



Warning & Caution

PLEASE DO NOT USE THE DEVICE WITHOUT FIRST OBTAINING APPROVAL FROM YOUR DOCTOR IF ANY OF THE FOLLOWING APPLY

- DO NOT immerse in water. Keep away from liquids or heat sources. Keep ventilation ports free from dust and debris.
- DO NOT remove screws or attempt to disassemble.
- DO NOT operate continuously for more than one hour. Allow device to rest for 30 minutes before reuse.
- Unplug the charger from device battery after charging or prior to use.
- For adult use only. Do not use it injured. Consult your doctor before using this product..



Safety Instructions

DANGER: TO REDUCE RISKS OF ELECTRIC SHOCK, FIRE AND PERSONAL INJURY, THIS PRODUCT MUST BE USED IN ACCORDANCE WITH THE FOLLOWING INSTRUCTIONS.

 
 
- For adult use only.
- Please keep this device away from children or store it in places where children cannot reach.
- This device is not food. Please do not put the head attachment or any parts into your mouth. Use only on the body's soft tissue as desired. Do not use on head or any hard or bony area of the body. Do not apply this device to the following body parts: sex organs, face, eyes, injuries after surgery, any kind of infection part, infected or damaged skin, injured bones and joints.
- Use only on a dry clean surface of the body over clothing by lightly pressing and moving across the body for approximately 60 seconds per region.
- In case of pain or other discomfort, please stop using immediately.
- Use only the head attachment which Hi5 provided and use on applicable body area.
- Bruising can occur regardless of control setting or pressure applied. Check treated areas frequently and immediately stop at first sign of pain or discomfort.
- Please keep fingers, hair or any other body part away from the shaft and backside of the head attachment as pinching may occur.
- Do not place any objects into the ventilation holes of the device.
- Carefully examine the device and battery before each use.
- Do not tamper or alter the device.
- Never leave the Vibration Massage Device working or charging unattended.



Battery Disposal


Before discarding the device, please use a suitable tool to open the metal part of the bottom, and then pick up the electronic board assembly so that you can take out the battery inside to discard (the user cannot replace the battery by himself):

- The battery must be removed from the device before discarding the device.
- When removing the battery, make sure the device is powered off.
- The battery should be disposed of according to the national garbage classification and hazardous garbage classification.

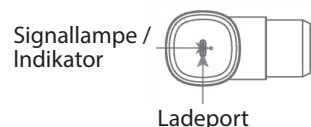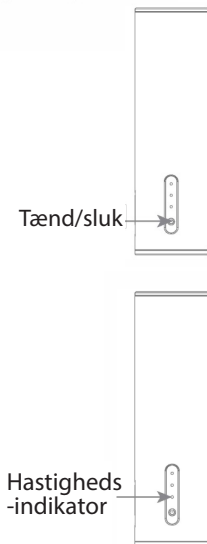

Det røde lys vil lyse mens enheden oplader. Det hvide lys er tændt, når enheden er fuld opladet.

 ⊙ The Way to Change the Massage Head

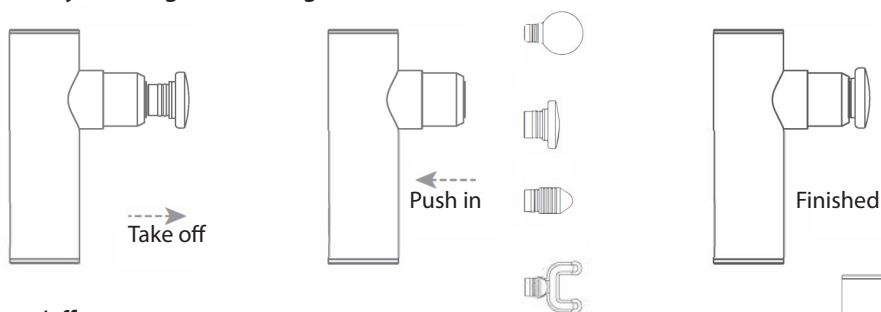

Turn on/off

- Press and hold the button for 3 seconds to turn on the device.
- Press and hold the button for 3 seconds to turn off the device.

Speed Adjustment

- Level 1 will be on by default when the device is turned on.
- Each press will increase the speed to a higher level.
- When the speed reaches Level 3, press once more and the speed will return to Level 1.

Attention:

The device is equipped with 10 minutes of working timer to avoid damage to the muscle and fascia caused by excessive massage.

⊙ Indicator and Blinker


- The speed level indicator shows the vibration speed.
- Level 1 will be on by default when the device is turned on.
- The speed will be changed by each short-press sequentially and cyclically.

3 Levels of Speed Intensity

Level 1	Level 2	Level 3
1800r/min	2600r/min	3200r/min

⊙ About Charging

 - Fully charging the device before the first time you use it.
- The red light will be on when the device is charging, and the white light will be on when the charging is finished.
- Full charging will take around 3h, and the run time will last around 8h when the level is at the highest.
- When the battery level is less than 10%, the red light will flash and please charge it as soon as possible.


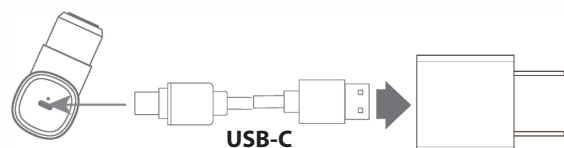


USB-C

User Supplied

Note: The charger should be 5V/2A.

  - For your security, do not use the device when it is charging.
- For a long service life, please charge the device as soon as possible once the red light flashes.

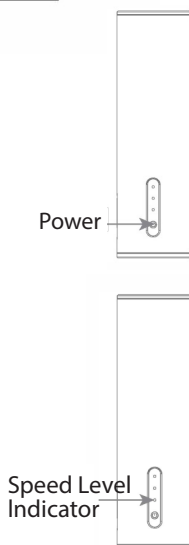

The red light is on when the device is charging.
The white light is on when the device finishes charging.

⚠ Kontraindikation

Det anbefales at kontakte egen læge eller behandler inden brug af massageapparatet, hvis følgende er gældende: **Graviditet, diabetes med komplikationer som f.eks. neuropati og skader med nethinden, har pace-maker, nylig operation, epilepsi eller migræne, diskusprolaps, spondylose, fået indopereret metalstifter og lign eller generelt problemer med dit fysiske helbred.** Børn bør ikke anvende enheden uden en voksen er tilstede.

⚠ Advarsel & Forsigtighed

• MÅ IKKE lægges i vand og holdes væk fra væsker og varmekilder.

- Hold ventilationsporten fri for støv og snavs.
- Fjern IKKE skruer eller forsøg på at skille enheden ad.
- Massageapparatet bør IKKE anvendes mere end en time ad gangen.
Det anbefales at lade enheden være slukket i 30 min inden den skal anvendes igen.
- Fjern enheden fra opladeren efter fuld opladning og under brug.
- Må kun anvendes af voksne.

⚠ Sikkerhedsinstruktion

Vigtig: For at reducere risikoen for elektrisk stød, brand eller personskaade, skal dette produkt anvendes i overensstemmelse med følgende instruktion:

- Må kun anvendes af voksne.
- Skal opbevares hvor børn ikke kan nå den.
- Massageapparatet eller dens dele må ikke puttes i munden.
- Anvend kun massageapparatet på bløddele. Må ikke anvendes på hovedet eller direkte på knogler. **Må IKKE** anvendes på følgende: kønsorganer, ansigtet, øjne, skader efter operationer, infektioner eller skadet væv, skadet led og knogler.
- Anvend kun på tør hud eller uden på tøj med et let pres og max. 1 min på samme sted.
- Stop behandlingen i tilfælde af smerter eller ubehag. Blå mærker kan forekomme.
- Anvend kun de originale massagehoveder.
- Anbring ikke andre genstande i ventilationshullet.
- Tjek enheden før brug.
- Efterlad aldrig enheden til opladning uden opsyn.

⚠ Bortskaffelse af batteri

Før du kasserer enheden, skal:

 
- Batteriet fjernes før massageapparatet smides væk.
- Massageapparatet være slukket, når batteriet fjernes.
- Batteriet afleveres sammen med andre batterier og ikke med almindeligt affald.

Garanti


1 års garanti fra købsdato. Garantien omfatter ikke følgende:

- Enheden er defekt efter tab, mishandling eller transportskade.
- Er forsøgt repareret uautoriseret.
- Ukorrekt brug og opbevaring af enheden
- Mangler købsbevis


⊙ **Pakkeliste**

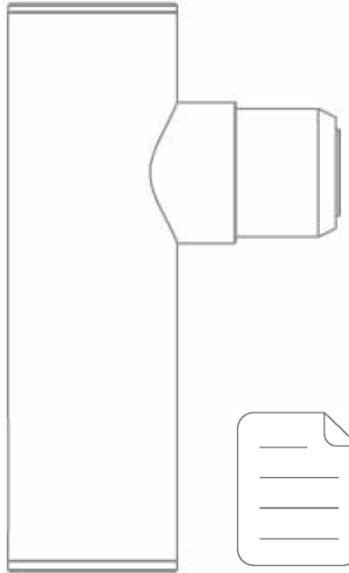


Massagehed Manual

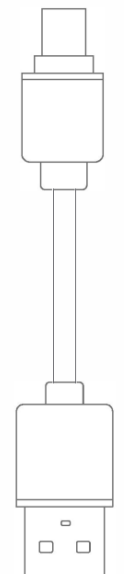 


USB-C Ladekabel

 


Fladt Hoved

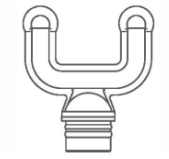 

U-format Hoved

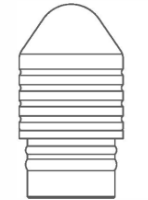 

Spids Hoved

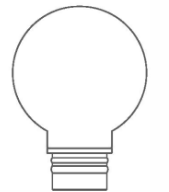 

Rundt Hoved



Din rygsterke partner ...

Mariendalsvej 22
8800 Viborg
Tel: +45 86613611
chiroform@chiroform.dk
www.chiroform.dk



**Mini Cooper Pro
MassageGUN**

Manual

DK Mini Cooper Pro MassageGUN
EN Cooper Vibration Massage Device

 


Your strong back partner....


EN

⊙ **Product parameter**

Product Name: Vibration Massage Device
Product Model: Cooper
Rated Power: 16W
Peak Power: 60W
Rated Voltage: 5V
Rated Current: 2A
Rated Frequency: 50/60Hz
Output Voltage: 5V
Output Current: 2A
Product Weight: 390g/0.86lbs
The Highest Speed: 3200r/min
Battery Capacity: 2000mAh
Product Size: 75x38x130mm/2.95"x
1.5"x5.12" (Massage head attachments excluded)
Power Supply: Chargeable lithium Battery

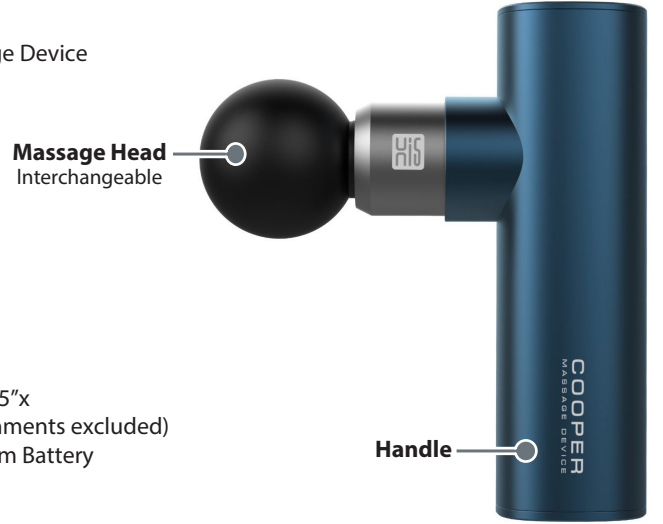

⊙ **Message Head**

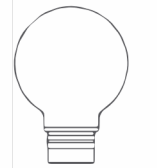 


RoundHead

For full body massage, such as the palm and sole.




Flat Head

 For full body relaxation and shaping.



Bullet Head

 For deep percussion to meridians and joints.

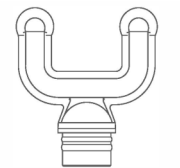

U-shape Head

For neck, shoulder and tendon.